

MASTERBUILT®

Hopper Lid Instruction Sheet


Gravity Fed Grill CGP24G1D, CGP28G1D, CGP30G1D




CAUTION




- Always remove plug from outlet before servicing your grill.
- Make sure your grill has fully cooled to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.

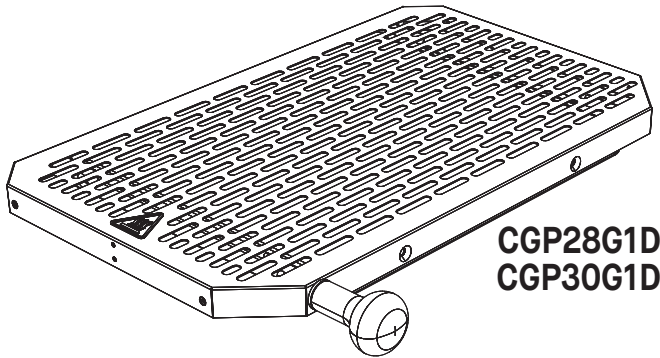


CGP28G1D
CGP30G1D

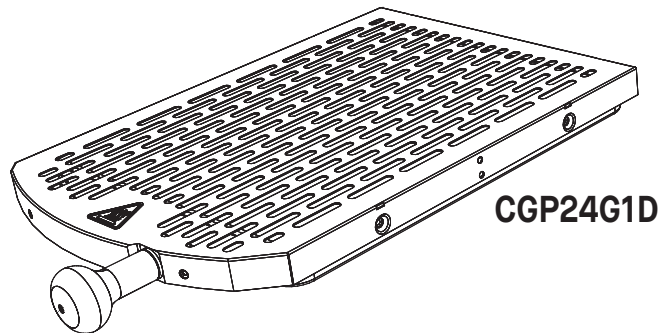

CGP24G1D

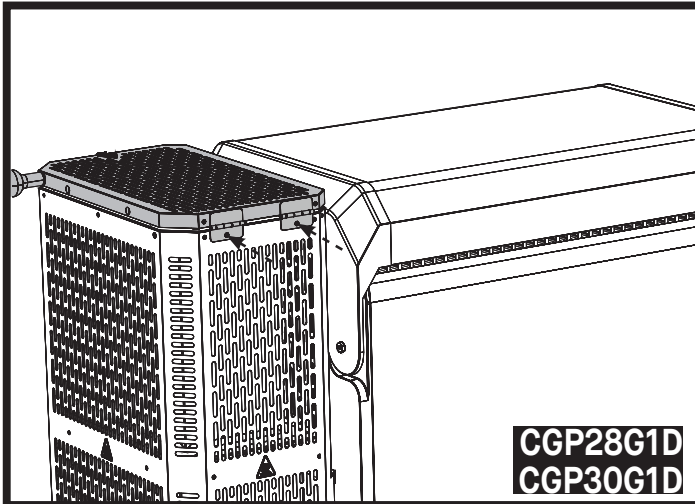

CGP28G1D
CGP30G1D

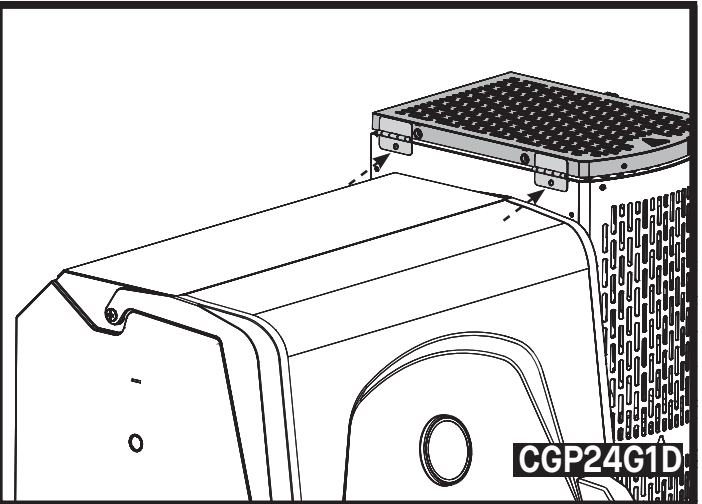

CGP24G1D

REMOVAL:

- Turn the grill off.
- Unplug the grill from any power source.
- Remove the two (2) screws holding the hinges of the lid in place.
- Remove the lid.

INSTALLATION:

- Confirm the grill is powered off and not plugged into a power source.
- Place the lid on top of the hopper, lining up the holes on the lid's hinges with holes on the top of the hopper.
- Insert and tighten the two (2) screws in on each hinge to secure the lid.